

**parkmate**

## Digital Tyre Inflator with Inbuilt LED Light



YOUR SAFETY COMES FIRST™

**parkmate**

### Specifications

**Operating Voltage:**  
DC 12V

**Operating Temperature:**  
0°C ~ +60°C

**Rated Power:**  
102W

**Max Current:**  
8.5A

**Max Inflatable Pressure:**  
150 PSI

**Speed:**  
For 195 / 65R15 Tyre  
From 0 ~ 35PSI < 7 Mins

**Power Cable Length:**  
3 Metres

**Air Hose Length:**  
0.5 Metres




All Images, Information and Content are Copyright © 2022  
Directed Electronics Australia Pty Ltd. All Rights Reserved.  
[www.parkmate.com.au](http://www.parkmate.com.au) | [www.parkmatehd.co.nz](http://www.parkmatehd.co.nz)


**DIRECTED**

[www.directed.com.au](http://www.directed.com.au)  
[www.directed.co.nz](http://www.directed.co.nz)

## Product Overview

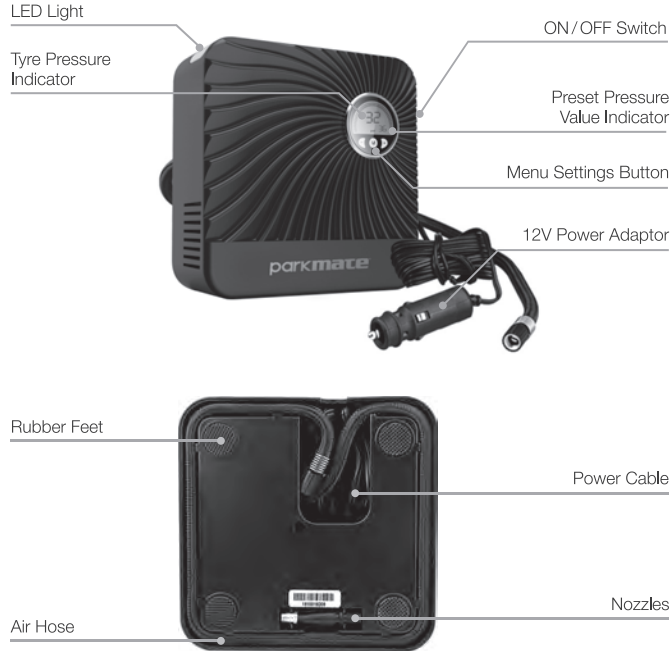

## How to use your Digital Tyre Inflator

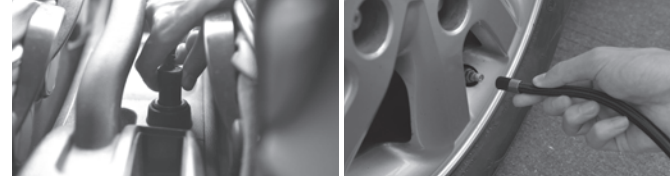

1. Power your vehicle ON and connect the unit's power adaptor to your vehicle's cigarette lighter.
2. Screw the air hose connector to your vehicle's tyre valve nozzle.



3. Press the menu settings button on your unit to select the unit of pressure. (Bar, kPa, PSI or kg/cm<sup>2</sup>).
4. After selecting the unit of pressure, press the '+' and '-' button to select the required pressure value. You can see this value on the bottom right corner of the screen. The large value in the centre of the screen will indicate the current tyre pressure.
5. Press the ON/OFF switch to start inflating your tyre.
6. After the required pressure is reached, press the ON/OFF switch to power OFF the unit and remove the air hose connector from your vehicle tyre. Be sure to screw the nozzle cap back onto your tyre nozzle.

**NOTE:** Refer to your vehicle user manual to find out the required tyre pressure. For your safety, if the unit is switched ON before you connect the air hose to your tyre, the unit will not work. Switch OFF and then back ON to use safely.